


# PHILIPS

AE 6545 Pocket Radio



Instructions for use  
Manual de utilização  
Brugsanvisning  
Bruksanvisning  
Käyttöohje  
Οδηγίες χρήσεως

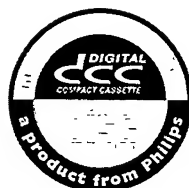

**PHILIPS**

## AE 6545 - Pocket Radio

English


Português

Dansk

Svenska


Suomi

Ελληνικά

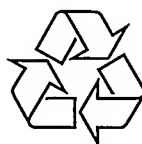

printed in Hong Kong

TC text/CvB/9612

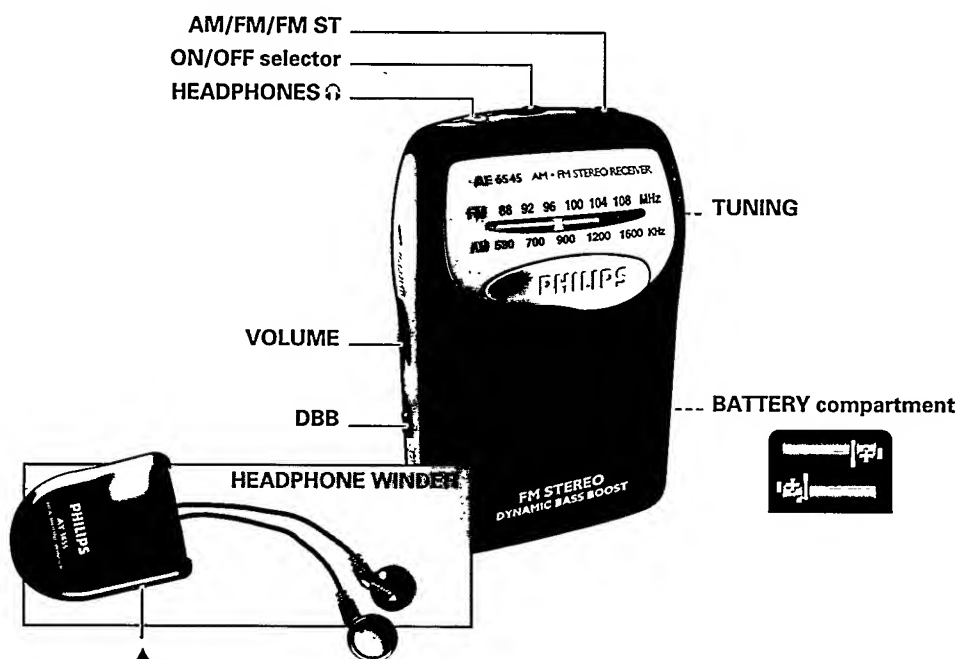



# English

## POWER SUPPLY

### Batteries (optional)

- Open and lift up the battery door and insert two alkaline batteries, type AAA, R03 or UM4 as indicated inside the compartment.
- Remove the batteries from the set if they are exhausted or not to be used for a long time.

## RADIO RECEPTION

1. Switch on the radio by turning the POWER switch to ON.
2. Adjust the sound using the VOLUME control and the DBB (Dynamic Bass Boost) switch. To obtain the Dynamic Bass Boost, push the DBB switch to ON.
3. Connect the headphones to the socket.

4. Select the wave range using the BAND selector.

**FM ST:** If the FM stereo signal is weak and distorted, set BAND selector to FM position. The transmission will now be heard in mono but the noise distortion will be suppressed.

**FM:** The headphone lead functions as the FM-aerial. Keep it extended and position accordingly. When you use the headphone winder, extend the cord to the yellow mark.

**AM:** Uses the built-in aerial. Turn the set to find the best position.

5. Tune to the desired radio station using the TUNING control.
6. To switch off the radio, turn the POWER switch to OFF.
7. To rewind the earphones push the ▲ button on the winder.

## General information

### ACCESSORIES

- Stereo headphones with winder.

### USE YOUR HEAD WHEN USING YOUR HEADPHONES

#### Hearing safety:

Do not play your headphones at a high volume. Hearing experts advise that continuous use at a high volume can permanently damage hearing.

#### Traffic safety:

Do not use headphones while driving a vehicle. It may create a traffic hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you don't hear what is going on around you.

### MAINTENANCE

- Do not expose set to rain, moisture, sand or to extreme heat from e.g. heating equipment or in motor cars parked in the sun.

### ENVIRONMENTAL NOTE

1. All redundant packaging material has been omitted. We have done our utmost to make the packaging easy to separate into two monomaterials:

- cardboard (box)
  - polyethylene (bags, protective foam sheet)
- Please observe the local regulations regarding the disposal of these packaging materials.

2. Your set consists of materials which can be recycled and reused if disassembled by a specialized company. Please inquire about local regulations on how to hand in your old set for recycling.
3. Do not dispose of exhausted batteries with your household waste. Please inquire about how to dispose of batteries according to local regulations.

## Troubleshooting

### TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** Under no circumstances should you try to repair the set yourself, as this will invalidate your guarantee.

### PROBLEM

- Cause
- Solution

### NO POWER

- Wrong battery polarity
- Insert batteries correctly
- Batteries exhausted
- Replace batteries

### NO SOUND (See also 'No power')

- Volume is turned down
- Turn up the volume
- Headphones not connected
- Connect headphones plug into socket

### POOR SOUND/SOUND FROM ONE CHANNEL ONLY

- Headphones plug not fully inserted
- Insert plug fully

### SEVERE RADIO HUM/DISTORTION

- FM aerial (headphones lead) not fully extended
- Extend FM aerial fully
- Set too close to TV, computer, etc.
- Move set away from other electrical equipment

This product complies with the radio interference requirements of European Community

The model number is found on the back of the set and the production number is found in the battery compartment.